KT-9018E Universal A/C remote

Brand	Model Code	Brand	Model Code
ALPIN	0252、0253、1788、3325	LITTLE DUCK	0527、0532、1556、2070
AUCMA	0288-0296 0462 2337 3534	LOREN SEBO	0288 0471 0472 1496 3543
AUX	0297-0300、0451、2860、3370	MACQUAY	0234-0237、0455、2283、3820
BANSHEN	0264 1288 3848	MICOM	0415 1439 2468
BOERKA	0383 0434 0436 0437 3967	MIDEA	0260-0265、1284、2310
CARRIER	0203-0209 0456-0458 0428-0486	MITSUBISHI	0001-0045、0476-0479、3628
CHANGHONG	0301-0308、1325、2353、3982	NORITZ	0431、1455、2468
CHIGO	0379-0382- 1916- 2940	PANASONIC	0138-0154 0483 2019 3738
CHOFU	0184-0187、1721、3771	National	0138-0154 0483 2019 3738
CHUNLAN	0345-0350 0450 0453 3932	PANDA	0378、0890、1405
CORONA	0155-0163 0459 2206	PHILCO	0210 0211 0487 0488 3795
CONROWA	0377, 1913, 3961	PROTON	0421-0423 2507 3593
CONSUL	0463 0975 2511	RAYBO	0362-0367、1387、2925
DAEWOO	0203-0209 0406 2256 3990	ROWA	0369- 0438- 0439- 1975- 3510
DAIKIN	0171-0183、2220、3758	Sabro	0435、0506-0508、2483、3579
DOCTOR	0221 0449 2497 3850	SAIJO DENKI	0212-0215- 1238- 3285
DONGBAO	0355-0361、2403、3430	SAMPO	0424-0426、1448、3497
DONGXINBAO	0413 2461 3997	SAMSUNG	0188-0196、2239、3772
Electrolux	0216-0220、1753、3802	SANYO	0046-0095 0559 1090 3678
FRESTECH	0277- 1813- 3349	SASUKI	0254 0470 2006 3838
FUJITSU	0127-0137、0464、1158、3720	SHANGLING	0384-0388 0444 0445 3969
FUNAL	0430 - 0481 - 1966 - 3502	SHARP	0096-0106、1633、2150、2656
GALANZ	0371、0372、1395、2933、3956	SHINCO	0351-0354 0454-0456 2912
General	0639- 1152- 2180- 3711	SHUANGLU	0376 0404-0407 0480 2476
GLEE	0398、0399、2446、3983	SHUAKANG	0288 0800 1311
GOLDSTAR	0201 - 0466-0469 - 2515	SONGGE	0428 0429 1965 2988
GREE	0309-0316、0482、0512、0513	SOVA	0409- 0410- 2457- 3482
HAIER	0266-0272 0453-0455 3852	SUMMER	0427, 1963, 2485, 3499
HISENSE	0332-0335、1869、2895、3917	SUNDURG	0257 0505 1793 3841
HITACHI	0118-0126、1148、2679、3709	SWAN	0434 0946 1556
HUABAO	0339-0344、1879、3409、3926	TADIRAN	0246-0251、2295、3833
HUAKE	0408 1432 2765 3992	TATUNG	0419 0420 1955 2979
HUAMEI	0402 0460-0465 1997 3533	TCL	0273-0281、1299、3347
HUALING	0317-0325 0452 2500 3906	TECO	0256 0473-0475 1280
HUIFENG	0370、0882、2420、3954	TIANDI	0415、0927、1538、3999
HUIKANG	0368 0441-0443 2416 3514	TOSHIBA	0107-0117、0489、1647、3181
HYUNDAI	0202 0433 0480 1226 2250	TRANE	0227-0232、0789、2276
JDC	0373 0440 1397 3000	UNI-AIR	0222-0224、0450、3522
JINDA	0414、1950、2536	WEILI	0393-0396、2442、3979
JINSONG	0389-0391、0446-0448、3462	Whirlpool	0164-0170- 0502- 2038- 3752
JOHSON	0245、0492、2028、3829	WINIA	0481、1505、3553
KANGLI	0374 0375 2935 3958	XILENG	0411, 0412, 2460, 3995
KELON	0282-0287、0473、0485-0488	XINLE	0400、0401、2960、3985
KLIMATAIR	0225 0226 0452 1988 3810		0403 1427 3475
KOLIN	0416-0418、1952、2465、3539	YINYAN	0258, 0259, 0326, 0331, 2888
KONKA	0397, 0457-0459, 2507, 3981	YORK	0238-0243 2287 3312
LG	0197-0200、0514、2050、3730	Zhen bao	0639、1164、2176、3200
LIANGYU	0233- 0451- 1257- 3523		


CE MADE IN CHINA

STOCK CODE:K0005218
KT-9018E
Universal A/C remote



Unique features
of Intelligent cool
and Intelligent heat

A pioneering work for A/C remote-Input code directly by digital key

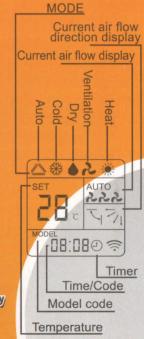

Control 99,99 percent Air-conditioners in the world

KT-9018E Universal remote control guide

Product Description

KT-9018E is using the patent of shell design and code setting that invented by our researchers. You can press the numeric buttons(0-9) for the code required directly, visual and combenient, quick and efficient. It has clock accurate, time on and off, code memory and also has original function of "intelligent cool" intelligent heat". So it is convenience for using.

Preparation

The remote control can be used after setting.Pull side cover of remote control down,put 2 AAA(VM-4,R03) batteries as per polar indicated on the battery cabin.

Patent coding set up

1.Find out the codes that required from the code table. There are many groups codes of each brand. Please try the first group, if it does not operate your equipment, try the second, and do like this until the codes can operate your equipment. Ex: AUCMA, you can choose 0288, if it does not work, please try the 0289 etc.

Auto-search by one key

If you do not know the brand of your air conditioner, or if your brand is not listed in the code cable, try searching for your code as follow:

1.Put the remote control aim at your air conditioner, press the "SELECT" button for 5 seconds and release, the remote control is entering the autosearch status, launch the signal continuously, the code blinking and increasing. When the air conditioner receiver the signal, and send a BUZZER, press any keys to confirm.

2.After your air conditioner on,try the other functions of your equipment, if do not work,repeat these steps until it can operate your equipment.

Using of "intelligent cool" and "intelligent heat"

In the summer,press the "intelligent cool" only,the air conditioner will be cooled immediately. In the winter,press the "intelligent heat" button only, the air conditioner will be heated immediately. In both status, the air conditioner will let the heading and cooling in a comfortable temperature automatically, and the fan and swing are automatically. At the same time, it also can adjust the temperature by the "+""-"button according to requires. These two intelligent keys suit the children and the old especially.

Clock set up

- 1. Press the "clock"button, clock signal is blinking.
- 2. Press the "+""-"of the "clock"button, setting to the current time.
- 3. Press the "clock"button again, stop blinking, the time setting is complete. (If you did not press the "time" button, it can be .setting automatically after 5 seconds)

Timer on

- You can set timer on, only turing off your air conditioner.
- 1.Press the "TMR on"button,the LCD displays the clock signal and time blinking.
- 2.Press"TIME/code""+""-"button,adjust the time when you want to make the air conditioner turn on automatically.
- 3. Time blinking and it will stop after 5 seconds. The LCD displays current time (1) and clock signal. Now setting is complete.

Timer off

- You can set timer off, only after turing on your air conditioner.
- 1.Press the "TMR off"button,the LCD displays the clock signal and time blinking.
- Press"TIME/CODE""+"or"-"button, adjust the time when you want to make the air conditioner turn off automatically.
- 3.Time blinking and it will stop after 5 seconds. The LCD displays current time and clock signal. Now setting is complete.

Note

- 1.If you press TIMER ON/OFF twice continuously, timer is deleted.
- 2.After timer setting is finished, you should make the remote control's emit directs toyour air conditioner s receiving location in available distance. If not the setting is deleted.
- 3.Iff you want to see the timer, you should press the TIMER ON/OFF key, the LCD will display the time and after 5 seconds it will display current time.

Attention

- 1.If it is not used for a long time,remove the battery to avoid leakage liquid of the battery to damage the machine.When the LCD looks dim.please change batteries.(New and old batteries can not be used together) After the batteries are replaced every time,it is not necessary to set model code again.
- 2.As usual the LCD only display the time when pressing model codes "Enter" button, you can find the code and it is showed on LCD. After 5 seconds it returns time. 3. Check acrefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
- 4.The manufacturer keeps the right to change the paramater and function of product.

Technical Parameters

Controllable diatance:Large than 8 meters Power supply voltage:DC3V Battery model:Battery AAA(UM-4、R03)*2

Dimension:L115mm*W46mm*D21(15)mm Weight:Approx.50g(excl.the batteries)